


RCA

user
manual

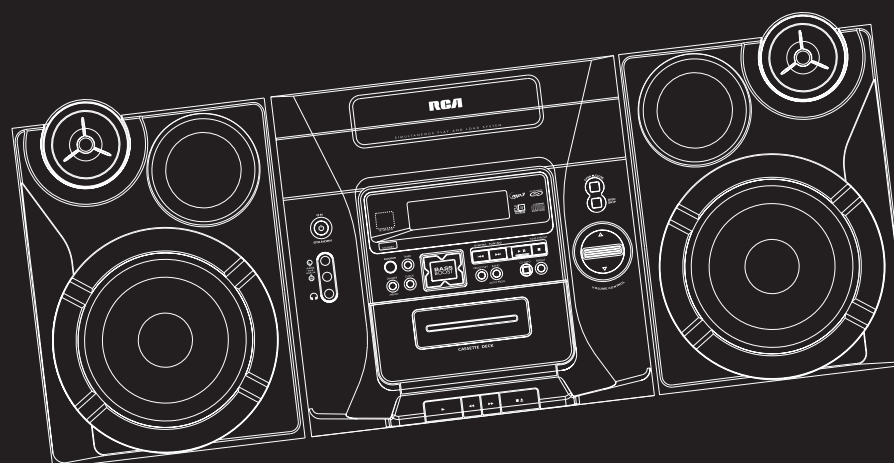

EXPORTER

Thomson Inc.

P.O. Box 1976

Indianapolis, IN 46206-1976

© 2006 Thomson Inc.

Trademark(s) ® Registered

Marca(s) ® Registrada(s)

Marque(s) ® Déposée(s)

www.rca.com

Printed In China / Impreso en China

5627 7290 (EN/F)

RS2653
RS2655

It is important to read this instruction book prior to using your new product for the first time.

FCC Information

EN FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

In accordance with FCC requirements, changes or modifications not expressly approved by Thomson Inc. could void the user's authority to operate this product.

This device generates and uses radio frequency (RF) energy, and if not installed and used properly, this equipment may cause interference to radio and television reception.

If this equipment does cause interference to radio or television reception (which you can determine by unplugging the unit), try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna (that is, the antenna for the radio or television that is "receiving" the interference).
- Move the unit away from the equipment that is receiving interference.
- Plug the unit into a different wall outlet so that the unit and the equipment receiving interference are on different branch circuits.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal Communications Commission has prepared a helpful booklet, "How To Identify and Resolve Radio TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, DC 20402. Please specify stock number 004-000-00345-4 when ordering copies.

This product complies with DHHS Rules 21 CFR Subchapter J. Applicable at the date of manufacture.

Have a Blast- Just Not in Your Eardrums
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphones are in place.



Technical specification

Product: 5CD Audio System

Brand: RCA

Model: RS2653/RS2655

Electrical Consumption:

Power Supply: 120V~60Hz

Power consumption: 100 Watts

IMPORTER

Comercializadora Thomson de México, S.A. de C.V.

Álvaro Obregón No. 151. Piso 13.

Col. Roma. Delegación Cuauhtémoc

C.P. 06700. México, D.F.


Telefono: 52-55-11-020360

RFC: CTM-980723-K55

For Your Safety

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way.

If the plug won't go into the outlet completely, turn the plug over and try to insert it the other way. If it still won't fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

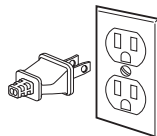

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

For Your Records

In the event that service should be required, you may need both the model number and the serial number. In the space below, record the date and place of purchase, and the serial number:

Model No.

Remote Control No.

Date of Purchase

Place of Purchase

Serial No.

Service Information

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this Guide.

Safety Information

EN



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Table of Contents

FCC Information Safety Information

Getting Started2

Unpacking the system2

Back View2

Installation2

General Controls3

Main Unit3

Remote Control4

Display Settings

Display5

Showing Demonstration5

Display Clock / Timer5

Setting the Clock5

Setting the Timer5

Activating the Timer5

Adjusting Display Brightness5

Sleep Mode5

Sound Features6

Bass Boost6

Muting Audio6

CD Player

Notes on CD-R/RW Disc6

Loading Discs7

Selecting a Disc7

Selecting Folders7

Playing Discs7

Play and Load

Simultaneously7

Skipping a Disc7

Searching Through a CD7

Shuffling the Play Order7

Sampling Tracks7

Repeat7

Setting Up a CD Program8

Playing a Program List8

Displaying the Program List8

Deleting Program List8

mp3/WMA Playback Sequence 9

Tape Player

Playing a Tape9

Radio10

Selecting Tuner Band10

Tuning to a Station10

Using Presets10

Auto Preset Programming

(FM only)10

Manually Setting Presets10

Suppressing Stereo Signal10

Troubleshooting Tips . .11

Maintenance12

Cleaning12

CD Player12

Tape Player12

Handling CDs12

Cleaning CDs12

CD Lens Care12

Important Information 13

Safety Precautions13

Headset Safety13

Important Battery

Information13

Don't Infringe13

Technical Specification13

Limited Warranty (Canada)14

Getting Started


EN

Unpacking the system:

You should have the following:

- one main unit (with 2 main speakers);
- one remote control;
- one AM loop antenna;
- one user's guide;
- one safety leaflet.
- Owner registration Card

Back View

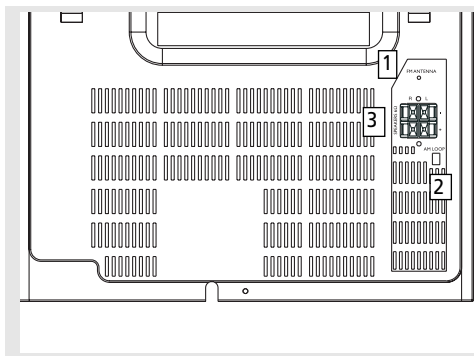

1. FM Pigtail Antenna
2. AM Loop Antenna Connector
3. Main Speaker Jacks


Using the FM and AM Antennas

Before you use your audio system, you'll want to make sure both the FM and AM antennas are positioned properly. Uncoil the FM antenna at the back of the unit, making sure it is fully extended (you may even want to tape it to the wall behind the unit if possible. The higher the better.) You'll also need to connect the AM antenna loop to the back of the unit if you listen to AM stations. Rotate the AM loop antenna for better reception.

Connecting the Speakers

Match the red wire (on the left speaker) to red terminal for the left speaker (L) on the back of the unit and the black wire (on the left speaker) to the black terminal for left speaker (L). Follow the same procedure to connect the right (R) speaker.


Speaker Wire Connection

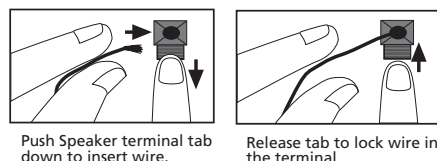

NOTE: Make sure the insulation is completely removed from the ends of the speaker wires at all connection points.

Installation


To ensure sufficient ventilation, keep the spacings shown below free from other surfaces:

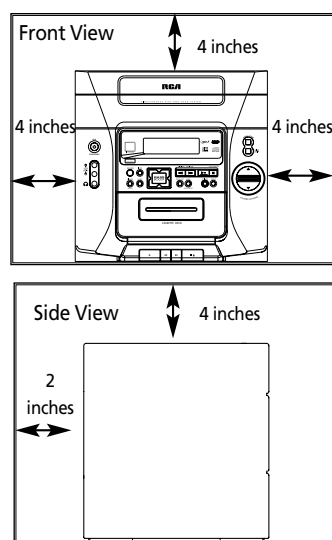

General Controls

Main Unit

EN

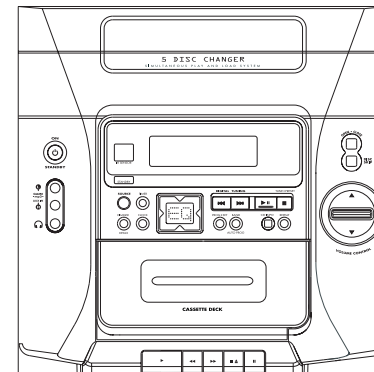

ON/STANDBY — Turns power on or off (STANDBY mode).



Tip:
Press **ON/STANDBY** to turn the system on in the previously used mode.
Press **CD**, **TAPE**, **TUNER** or **AUX** (Remote Only) to select the corresponding mode.
Look at the display icons to identify the current mode.

GAME •mp3• L / R / AUX IN - Jack for auxiliary input connection.

PHONES — Jack for connecting headphones

OPEN/CLOSE — Opens or closes the disc tray.

DISC SKIP — Skips to the next CD in the tray.

VOLUME CONTROL — Increases/ decreases volume.

SOURCE — Selects among CD player, tuner, tape player and AUX sources.

DIMMER•DEMO — Turns the feature demonstration on or off; adjusts display brightness;

TIMER — Enters timer setting mode and turns the timer on/off.

CLOCK — Shows time and enters clock setting mode.

BASS BOOST — Turns BASS BOOST on or off.

DIGITAL TUNING ⏮ (SKIP BACKWARD) — Tunes down radio frequency, selects preset radio channels, goes to the previous CD track or setting option, fast searches backward through the CD.

DIGITAL TUNING ⏭ (SKIP FORWARD) — Tunes up radio frequency, selects preset radio channels, goes to the next CD track or setting option, fast searches forward through the CD.

▶ ■ **PLAY / PAUSE** — Plays or pauses CD.

TUNE•PRESET ■ — Stops CD track, Sets tune or preset mode.

PROG•SET — Enters program mode for CD and Tuner; applies new settings for Clock and Timer modes.

BAND/AUTO PROG. — Changes between FM and AM tuner bands, enters auto preset program in FM mode.

CD INFO — Selects among disc display information.


REPEAT — Selects among repeat modes.

Tape Player

- ▶ **PLAY**
- ◀◀ **REWIND**
- ▶▶ **FAST-FORWARD**
- ▲ **STOP/EJECT**

General Controls

EN

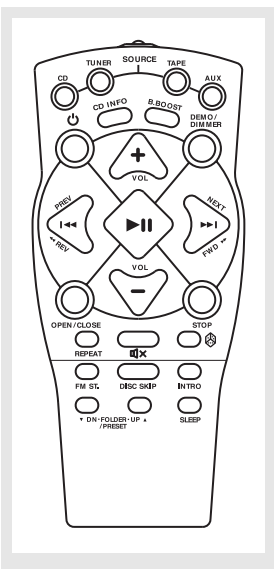

Remote Control

- Turns power on or off from **STANDBY** mode.
- CD** — Selects CD player.
- TUNER** — Selects radio tuner and changes radio band in Tuner mode.
- TAPE** — Selects tape player.
- AUX** — Selects Aux mode; turns the system on.
- CD INFO** — Selects among disc display information.
- B. BOOST** — Turns Bass Boost on or off.
- DEMO/DIMMER** — Turns the feature demonstration on or off; adjusts display brightness;
- VOL+ / VOL-** — Increases/ decreases volume.
- PLAY/PAUSE** — Plays and pauses current CD.
- NEXT** **/FWD** — In CD mode - Skips forward to the next CD track; In Tuner mode - Tunes up radio frequency.
- PREV** **/REV** — In CD mode - Skips backwards to the previous CD track; In Tuner mode - Tunes down radio frequency.
- OPEN/CLOSE** — Opens and closes CD disc tray.
- STOP** — Stops playing CD.
- REPEAT** — Repeats a track, CD, or all CDs.
- mutes and restores audio output.
- Turns on/off random playback.
- FM ST.** — Switches between FM stereo and mono modes.
- DISC SKIP** — Skips to next CD.
- INTRO** — Turns INTRO mode on or off to play the first 10 seconds of each track.
- ▼ DN•FOLDER/PRESET•UP ▲** — Selects previous / next tuner preset station and previous / next folder during mp3/WMA CD playback.
- SLEEP** — Selects the time interval in minutes before the unit turns off.



Note:
Cassette functions can not be operated from the remote control.

Installing Batteries

- The remote control must be inserted with 2 "AAA" or "R3" or "UM 4" batteries prior to use. Follow the steps below to ensure correct installation.
1. Open the battery compartment door (located at the back of the remote control) by sliding the cover out.
 2. Before inserting the batteries, observe the polarities (that is, + and -) of the battery then relate the polarities to the engraved diagram inside the battery compartment. Now insert the batteries.
 3. After installation of the batteries, place the lit to cover the batteries. Lightly push it closed with a snap.

Display Settings

Display



EN

Showing Demonstration

Press **DIMMER•DEMO** to turn on/off demonstration mode. The demonstration scrolls through all display operations.



Note:
The wake up timer source will be the source you are in when setting the timer.

Display Clock / Timer

Setting the Clock

1. Press and hold **CLOCK** until the hour flashes on the display.
2. Press **DIGITAL TUNING** or to set the hour and then press **CLOCK** to shift to minute digits.
3. Press **DIGITAL TUNING** or to set the minute.
4. Press **PROG•SET** to save settings or **STOP** to quit setting.



Note:
When system is ON, you can press **CLOCK** to display the current time for about 2 seconds.

Setting the Timer

1. Press and hold **TIMER** until **ON** (timer on time) appears with the hour flashing.
2. For setting time, press **DIGITAL TUNING** or to set the hour and then press **TIMER** to shift to the minute digits.
3. Press **DIGITAL TUNING** or to set the minute.
4. Press **TIMER** to change to **OF** (timer off time) with hour flashing. Repeat steps 2 & 3 for timer off time setting.
5. Press **PROG•SET** to save settings or **STOP** to quit setting.

Activating the Timer

Press and release **TIMER** to turn on/off the timer. The timer is active when the clock icon is lit.

Adjusting the Display Brightness

1. Press and hold **DIMMER•DEMO** for more than 2 seconds.
2. While the dimmer is displayed, press and release **DIMMER•DEMO** repeatedly to select the desired level (DIMM 1 - 3).

Sleep Mode

You can select the time interval in minutes before the unit turns off automatically. Press **SLEEP** on the remote to select among OFF, 120, 90, 60, 45, 30, 15 and 5 minutes. (Remote Only)

The sleep icon flashes on the display when sleep mode is activated.

When sleep is activated, press **SLEEP** once to view remaining sleep time.

Press **SLEEP** again when the remaining sleep time is displayed to change sleep time.




Note:
Sleep is automatically de-activated when the unit is turned off.

Sound Features

EN BASS BOOST

Press **BASS BOOST** to turn on/off boosting the bass frequency. The BASS icon lights on the display when it is activated.

Muting Audio

Press **MUTE**  on the remote to cut the sound. (Remote Only)

MUTE

CD Player



This unit is compatible with CD-RW/ CD-R discs for playback.

Notes on CD-R/RW Disc:

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.**



Note:

Be sure to remove all discs from the disc compartment before moving or transporting the unit!



Caution:

Do not push to force closing of the tray during CD playback or tray opening.



Notes on mp3/WMA Disc:

- Use .mp3 as the extension when converting audio files into mp3 for saving onto CD-R(W) or CD-ROM, e.g. Abc08.mp3. Do not use any other extension e.g. .doc, .pdf.
- Do not use the .mp3 extension for other text or non-audio data files as this may result in serious malfunction and harmful noise interference.
- For better quality in mp3/WMA disc playback, the CD quality should be recorded 128kbps or above.
- Disc data size > 650MB is not recommended.
- Total files and folders in the disc should not exceed 250, it also depends on the length of the file/folder names.
- For mixed mode discs, only one mode will be selected for playback depending on the recording format.
- To ensure good performance, wait until the disc changer completely reads the disc before proceeding.
- mp3 files in CD ROM EXTRA format disc cannot be recognized.


 
CD Player



Notes on Simple mp3/WMA Playback:

- This unit is compatible with simple mp3/WMA discs. Text information can be shown (e.g. ID3 tags)
- It is strongly recommended that you use a single folder structure for simple mp3/WMA discs. If there are more than only layer of folders, the tracks may be rearranged.
- The first 100 folders from the first 8 folder levels can be read on this unit.
- The unit reads the first 412 files from each discs and the first 255 files in each folder.

Loading Discs



- Press **SOURCE** repeatedly to select **CD** mode.
- Press **OPEN/CLOSE**  to open the drawer.
- Insert up to five discs with label face up. (Press **DISC SKIP** to rotate the disc carrier.)
- Press **OPEN/CLOSE**  to close the drawer. Loaded disc position icon lights.

Selecting a Disc

Press **DISC SKIP** to skip discs.


 

Selecting Folders (mp3 / WMA CDs Only)

In stop mode,



- Press **FOLDER/PRESET**  to go to the previous folder.
- Press **FOLDER/PRESET**  to go to the next folder.

The folder number (TF) shows briefly then the total number of tracks (TT) is displayed.

 
 
Playing Discs

- Press **PLAY/PAUSE**  to begin or pause play, and **STOP** to stop play.
- Press **SKIP BACKWARD**  / **SKIP FORWARD**  to select a specific track.


Play and Load Simultaneously

- Press **OPEN/CLOSE**  to open the tray while a CD is playing
- Load/change discs for available trays by pressing **DISC SKIP**.
- Press **OPEN/CLOSE**  to close the tray.

Searching Through a CD

Press and hold **SKIP BACKWARD**  / **SKIP FORWARD**  to search through a CD while it is playing.

Shuffling the Play Order

Press **SHUFFLE**  to turn on/off the playing of tracks in random order. (Remote Only)

Sampling Tracks

Press **INTRO** to play the first 10 seconds of each track on the current disc, all discs in the tray, or turn **INTRO** mode off. (Remote Only)

Repeat

Press **REPEAT** to repeat the current track, current disc, all discs, or turn **REPEAT** mode off.

CD Player

EN Setting Up a CD Program

You can program the CD player to play up to any 32 tracks on the CDs in the tray.

1. While the CD player is stopped, press

5 P:01

PROG•SET to enter program mode. The system displays the next available program number: "- P:01," with "-" flashing, prompts you for the first track in the program list.

2. Press **SKIP BACKWARD** ◀◀ / **SKIP FORWARD** ▶▶ to select a track (press **DISC SKIP** to select a track from a different disc).
3. Immediately press **PROG•SET** to assign the selected track to the program number. After 3 seconds, you are prompted for the next track in the program list. (In CD program mode, **PROG** icon will be lit.)

Playing a Program List

While in PROGRAM mode, press **PLAY/PAUSE** ▶|| .

Displaying the Program List

1. While the CD player is stopped, press **PROG•SET** to enter PROGRAM mode.
2. Press **PROG•SET** repeatedly to list each track assignment in the program list.

Deleting Program List

While in PROGRAM mode, press and hold **STOP** for 3 seconds. The system displays the message **CLEAR**.



Tips:

- You can create a program of up to 32 tracks.
- Press CD INFO repeatedly to view elapsed track time, track number, track remain time and disc remain time.



Note:

Only the first 199 tracks from each disc can be programmed.



 
Note:

- The first 99 tracks of each disc will be shuffled and played once before any of them is repeated.
- You may also press REPEAT to select 1 disc or all discs before activating INTRO & SHUFFLE functions.
- In stop mode for mp3 and WMA CDs, press STOP to return to the first track of the current disc. The total number of tracks on the current disc is displayed (TT).

CD Player

mp3/WMA Playback Sequence

- Refer to the diagram below for playback sequence details on multi-level folder structure.
- Songs are played before playing songs placed in folders at each level.

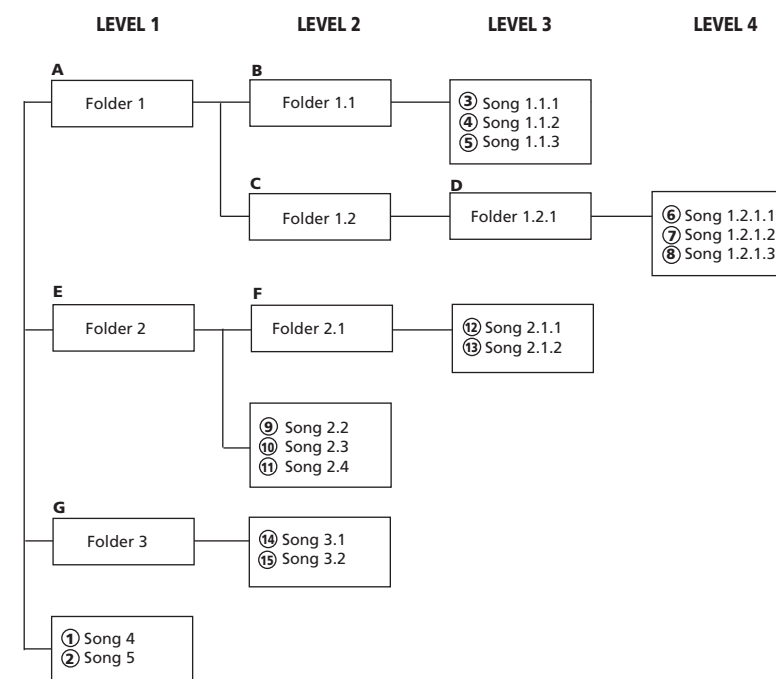

Note:

- Folder playback sequence is indicated by the letters A to G.
- Song playback sequence is indicated by the numbers (1 to 15) in front of the song name.

Tape Player

1. Press **SOURCE** repeatedly to select **TAPE**.
2. Press **■ ▲** to open the cassette door.
3. Insert a tape into the door and push the door closed.
4. Press **◀◀ ▶▶** to position the tape to the desired starting position.
5. Press **▶** to begin playback.

Radio

EN Selecting Tuner Band

1. Press **SOURCE** to select **TUNER**.
2. Press **BAND** to select between AM or FM radio band.



Tips:
Your audio system has 32 preset stations.

Tuning to a Station

Press **SKIP BACKWARD** ◀◀ / **SKIP FORWARD** ▶▶ to select frequencies.

87.50 MHz

Using Presets

The tuner can be in either TUNE or PRESET mode. When in PRESET mode, the PROG light is on.

- Press **TUNE•PRESET** to select between TUNE and PRESET modes.
- Press **SKIP BACKWARD** ◀◀ or **SKIP FORWARD** ▶▶ on the main system or **PRESET UP** or **DOWN** on the remote control to access the previous or next preset station. The display first shows the preset program number and after a few seconds, the frequency will be displayed. (FMPR:01 is FM preset 1)

PR:01

Auto Preset Programming (FM only)

Press and hold **BAND** button for 2 seconds to scan stations in FM band. The stations will then be stored as preset channels. A maximum of 32 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. You can stop the automatic scan by pressing any button, but the erased stations cannot be recovered.

AUTO

Manually Setting Presets

1. Press **TUNE•PRESET** button to enter TUNE mode.
2. Press **SKIP BACKWARD** ◀◀ / **SKIP FORWARD** ▶▶ to access the desired frequency.
3. Press the **PROG•SET** button once.
4. The most recently accessed program location will be displayed.
5. If a different program location is preferred, press **SKIP BACKWARD** ◀◀ / **SKIP FORWARD** ▶▶ to move to the desired preset number (1-32).
6. Press **PROG•SET** to store the selected frequency at that preset.

Suppressing Stereo Signal

Press **FM ST.** to toggle between FM mono and stereo for stereo FM stations. (Remote Only)

Troubleshooting Tips

Problem	Solution	Problem	Solution
<i>System will not turn on</i>	<ul style="list-style-type: none"> • Check power cord for a secure connection. • Unplug the unit for a moment, and then plug into power source again. • Check the outlet by plugging in another device. 	<i>CD button will not respond, or does not change discs when you press DISC SKIP</i>	<ul style="list-style-type: none"> • Switch to another function (TAPE, Tuner) and then back to CD.
<i>No sound</i>	<ul style="list-style-type: none"> • Increase the volume setting. • Check connection to speakers. • Check that you have selected the appropriate function: CD, TAPE, Tuner. • Make sure mute is off. • Make sure headphones are not plugged in. 	<i>Distorted or noisy tape recordings</i>	<ul style="list-style-type: none"> • Inspect the tape head, clean it if necessary.
<i>Poor radio reception</i>	<ul style="list-style-type: none"> • Check antenna connection. • Move antenna. • Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights. 	<i>Remote control does not work</i>	<ul style="list-style-type: none"> • Check that the batteries are properly installed. • Replace weak batteries. • Check the system is plugged into power source. • Point the remote directly at the system's front panel. • Move closer to the system. • Remove any obstacles between the remote and the system.
<i>CD does not play</i>	<ul style="list-style-type: none"> • Check that CD is in the tray. • Check that CD label is facing up. • Check that PAUSE mode is not on. • Check that CD function is selected. • Use CD lens cleaner. • Clean the disc. • Try another CD. 		
<i>CD sound skips</i>	<ul style="list-style-type: none"> • Clean the disc. • Check disc for warping, scratches, or other damage. • Check if something is causing the system to vibrate. If so, move the system. • Make sure the speakers are at least 3 feet away or on a different surface from the main unit. 		

EN

Maintenance

EN

Disconnect the audio system from the power source before performing any maintenance.

Cleaning

Clean the exterior of the system using a soft dust cloth.


CD Player

CAUTION! This system operates with a laser. It must be opened by only a qualified technician.


Tape Player

To prevent deterioration of sound quality, periodically open the door of each deck and clean the magnetic heads, pinch roller, and capstan with a cotton bud dipped in alcohol. Also, demagnetize the head by playing a demagnetizing cassette (available through an audio equipment store).

To protect recordings on one or both sides of a tape, remove the corresponding tab. If you later want to record on the tape, affix a piece of adhesive tape over the hole.

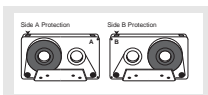

Quit Slacking - A little bit of slack in your tapes can cause scratches on the tape, or worse yet, the tape could break. If you notice some slack in the tape, use a pencil to tighten it up before you insert it.

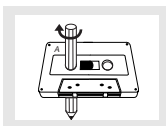

Handling CDs

- Do not touch the signal surfaces. Hold CDs by the edges, or by one edge and the hole. Do not affix labels or adhesive tapes to the label surfaces. Do not scratch or damage the label. CDs rotate at high speeds inside the player. Do not use damaged (cracked or warped) CDs

Cleaning CDs

- Dirty CDs can cause poor sound quality. Always keep CDs clean by wiping them gently with a soft cloth from the inner edge toward the outer perimeter.
- If a CD becomes dirty, wet a soft cloth in water, wring it out well, wipe the dirt away gently, and then remove any water drops with a dry cloth.
- Do not use record cleaning sprays or antistatic agents on CDs. Also, never clean CDs with benzene, thinner, or other volatile solvents which may cause damage to disc surface

CD Lens Care

When your CD lens gets dirty it can also cause the system to output poor sound quality. To clean the lens you will need to purchase a CD lens cleaner which can maintain the output sound quality of your system. For instructions on cleaning the CD lens, refer to the ones accompanying the lens cleaner.

Important Information

Safety Precautions

- Never open the cabinet under any circumstances. Any repairs or internal adjustments should be made only by a trained technician.
- Never operate this product with the cabinet removed.
- Do not use your System immediately after transporting it from a cold place to a warm place, as condensation may cause the system to malfunction.
- Keep your unit away from humid areas and abnormally hot places.
- Do not touch the player with wet hands. If any liquid enters the player cabinet, take the player to a trained technician for inspection.
- This compact disc player uses a laser to read the music on the disc. The laser mechanism corresponds to the cartridge and stylus of a record player. Although this product incorporates a laser pick-up lens, it is completely safe when operated according to directions.
- Discs rotate at high speed inside the player. Do not use damaged, warped, or cracked discs.
- Do not touch the pick-up lens which is located inside the disc compartment. To keep dust from collecting on the pick-up lens, do not leave the compartment door open for an extended period of time. If the lens becomes dirty, clean it with a soft brush, or use an air blower brush designed for camera lenses.
- The apparatus shall not be exposed to dripping and splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- Main plug is used as the disconnect device, it shall remain operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.

Headset Safety

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
- If you experience ringing in your ears, reduce volume or discontinue use.
- You should use with extreme caution or temporarily

ily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you to hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
 - if mixed with a different battery type,
 - if inserted incorrectly,
 - if all batteries are not replaced at the same time,
 - if disposed of in fire, or
 - if an attempt is made to charge a battery not intended to be recharged.

Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for unintended purposes are unlawful and therefore not condoned by Thomson.

Technical Specification

Power supply: 120V~60Hz
 Dimensions (H x W x D inches):
 Unit size - 12.3 x 12 x 15.9
 Main Speaker - 12.2 x 9 x 7
 Tape deck: Response curve: 125Hz-8kHz (-5dB)
 CD player: Response curve (+/- 2dB): 60Hz to 15 kHz
 Rating Plate: Look for it at the back of the set.
 The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details should any discrepancies arise in other languages.

EN

Limited Warranty (Canada)

EN

What your warranty covers:

- Defects in materials or workmanship.

For how long after your purchase:

- One year from date of purchase for labor and parts
- The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

What we will do:

- Pay any Authorized RCA Audio Service Center the labor charges to repair your unit.
- Pay any Authorized RCA Audio Service Center for the new or, at our option, refurbished replacement parts required to repair your unit.

How you get service:

- Take your unit to any Authorized RCA Audio Service Center. To identify your nearest Authorized RCA Audio Service Center, ask your dealer, look in the Yellow Pages, or call 1-800-336-1900.
- Show the Authorized Service Center Representative your evidence of purchase date or first rental.
- Pick up your unit when repairs are completed.
- Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service. For rental firms, proof of first rental is also required.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual describes how to install, adjust, and operate your unit. Any additional information should be obtained from your dealer.)
- Installation and related adjustments.
- Signal reception problems not caused by your unit.
- Damage from misuse or neglect.
- Cleaning of audio heads.
- Batteries.
- A unit that has been modified or incorporated into other products or is used for institutional or other commercial purposes.
- A unit purchased or serviced outside Canada.
- Acts of nature, such as but not limited to lightning damage.

Product Registration:

- Please complete and mail the Product Registration Card packed with your product. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limited Warranty (Canada)

EN

Limitation of Warranty:

- THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON MULTIMEDIA LTD., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.
- REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON MULTIMEDIA LTD. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE PROVINCIAL LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

How Provincial Laws relates to warranty:

- This warranty gives you specific legal rights which are in addition to statutory warranties that may vary from Province to Province.

If you purchased your unit outside Canada:

- This warranty does not apply. Contact your dealer for warranty information.

Service calls which do not involve defective materials or workmanship are not covered by this warranty. Costs of such service calls are the sole responsibility of the purchaser.